

## Refillable Cartridge Instructions for Epson 1400/1430, R1900, R2000 & R2880



The instructions below describe how to fill and use refillable cartridges, in general terms. Color managed work flows are not discussed here, nor are instructions for using Piezography inks. Filling and using these cartridges is easy, provided you are prepared before you begin and follow the instructions below. Additional ink bottles are available from [www.inkjetmall.com](http://www.inkjetmall.com). For further information on ConeColor inks, visit [www.conecolor.com](http://www.conecolor.com), or Piezography visit [www.piezography.com](http://www.piezography.com). Printer specific info for Piezography K7 ink shade placement is located on page 2 of these instructions, please refer to it before filling the cartridges with ink.

**\*Inspect cartridges for damage and make sure chips are secured flat to carts before filling with ink.**

**\*Test your printer with Epson carts to make sure it works perfectly before installing any third party inks/carts, even if using a brand new printer.**



**Piezography ink users:** Clean color ink off points in print head. Using Q-tips and PiezoFlush or distilled water, carefully wipe each point in a circular motion with a moist Q-tip, then absorb remaining liquid using dry Q-tips (see photo above). This is to avoid color staining in your B&W cartridges and prints.

### **Filling Procedure:**

1. Place empty cartridges, ink bottles and syringes on a work surface. Choose filling area and clothes you wear carefully, as accidents can happen, and pigment ink is permanent. Have glass cleaner and paper towels handy in case ink is spilled, and wear rubber gloves when working with ink.
2. Select the correct bottle of ink for the cartridge, and shake it gently. Unscrew the cap, and remove the silicone plug or cut around the foil seal to open the bottle.
3. Fill a syringe with 15ml of ink using a blunt needle to draw ink out of bottle. Make sure to fill each cartridge with the correct ink; if mis-filled with the wrong ink, cartridges can not be cleaned and must be replaced.
4. Remove fill hole plug from top of cartridge.
5. Leaving needle attached to syringe, insert needle into cartridge fill hole. Hold cartridge at an angle with fill hole up then gently push syringe plunger to slowly refill cartridge with ink. Tap side of cartridge with your knuckle to release trapped air and allow ink to settle, then continue filling.
6. Once cartridge is filled with ink, remove needle from cartridge and insert rubber plug securely back into the fill hole. For accurate ink level tracking, cartridges must be totally filled (a small air bubble is ok, but too much air can cause the cart to empty before the printer gives warning).
7. Gently tap filled cartridge a few times exit valve down on a folded paper towel to force air up and ink down. Remove air vent plug from the cartridge, making sure vent hole is fully OPEN. Do not remove top or side labels.
8. Install cartridges into printer (make sure they snap firmly in place for proper instillation), wait 10-15 minutes to allow ink to settle, then run 1-3 cleaning cycles and print a nozzle check to verify all positions are fully printing. Now you are ready to print! Syringes and needles can be rinsed out with water, air dried and reused many times.

## Refilling Procedure:

Keep track of the ink level and do not allow cartridges to run dry. When a cartridge is empty and needs to be refilled, check the other carts and refill any others that are also low if you wish (but only the one that read empty will reset the ink level after being reinserted into the printer, unless a chip resetter is used to manually reset the ink level). Gently shake ink bottles to ensure pigment is in suspension before filling or refilling carts. **Always make sure carts are filled and refilled with the correct ink- if carts are mis-filled with the wrong ink, they can not be cleaned and corrected- in this case you must use new carts.**

These cartridges can be refilled & reused MANY times, though for best results we recommend replacing after about a year of use.

1. Have ink, blunt needles and syringes ready on a workspace before removing carts from printer to refill.
2. Remove colored plug from cartridge fill hole and leave air vent hole OPEN. Draw 15ml ink into the syringe. Leaving needle attached to syringe, insert needle tip into cartridge fill hole. Hold cartridge at an angle with fill hole up then gently push syringe plunger to slowly refill cartridge with ink. Tap side of cartridge with your knuckle to release trapped air and allow ink to settle then continue filling.
3. Once cartridge is refilled with ink, remove needle and reinsert fill hole plug, then tap cart exit valve down on a folded paper towel a few times and reinstall into pinter. After installing refilled carts into the printer, wait 10-15 minutes for ink to settle. Always print a nozzle check after refilling carts before printing images.

## How to Reset Ink Levels:

These refillable cartridges use Auto Reset Chips, which are designed to reset the ink level when a cartridge reads empty in the printer, is removed, refilled with ink then reinstalled in the printer. Upon re-installation, the chip will reset to read full again. **NOTE: Ink level will ONLY reset when the ink out light appears on the printer. Only the cartridge that reads empty will reset so that less than full cartridges will not be mistakenly reset to read full, which could cause a cartridge to run dry.** If you wish to refill and reset all carts at once, a chip resetter can be used to manually reset ink levels to read full. The 1400, 1430, R1900 and R2880 refillable cartridges use the same chip resetter, available thru Inkjetmall.

\* **R2000** cartridges come with a small two point metal device for resetting the chips. To reset a chip, use the included two point metal device (or tweezers, bent paperclip, etc...) and gently touch the two metal points to the two round contacts on top of the green chip (marked in the top/left photo on page 1). The cart will read full when reinstalled in the printer.

## Piezography Ink Users:

The tables below apply to Piezography ink, make sure to follow the shade placement chart for the specific setup you're using. Shade 1 is the darkest (black) and Shade 7 is the lightest. For easy refilling (and to avoid accidental mis-filling carts with the wrong ink), we recommend writing the ink and shade # on the side of each cartridge, following the chart below.

**Note:** For Piezography **gloss** printing, Photo Black, Gloss Overprint, and glossy curves must be used. Contact Inkjetmall for more information or to have a custom Piezography curve made. \*Before attempting to print with Piezography inks, be sure to read the Piezography manual, located at [www.Piezography.com](http://www.Piezography.com), along with other helpful documents related to Piezography printing.

### *Printer: 1400 & 1430*

Cartridge Position (Left to right)	1) Piezography K6 Matte*	2) Piezography PiezoDN**
Yellow	Shade #6	Shade #6
Black	Matte Black Shade #1	Photo Black Shade #1
Light Cyan	Shade #3	Shade #3
Light Magenta	Shade #5	Shade #5
Magenta	Shade #4	Shade #4
Cyan	Shade #2	Shade #2
<b>NOTES</b>	* Use 1400/1430 K6 curves	** Use 1400/1430 PiezoDN curves

### *Printer: R1900 & R2000*

Cartridge Position (Left to right)	1) Piezography K7*	2) Piezography PRO**
Yellow	Shade #7	Warm: Light
Magenta	Shade #6	Warm: Medium
Matte Black	Shade #2	Cool: Dark
Red	Shade #3	Warm: Dark
Orange	Shade #4	Cool: Light
Photo Black	Shade #1 (Matte or Photo Black)	HD Matte or HD Photo Black
Gloss Overprint	Gloss Overprint (for gloss printing) PiezoFlush (if NOT printing gloss)	Gloss Chroma Overprint (for gloss and DN printing)
Cyan	Shade #5	Cool: Medium
<b>NOTES</b>	* Change black ink for matte or gloss printing. Use "K7" curves	** Warm and cool split-tone, change black ink for matte or gloss printing. Use "PRO" curves

**Printer: R2880**

Cartridge Position (Left to right)	1) Piezography K7*	2) Piezography P2**	3) Piezography PRO***
Light Light Black	Gloss Overprint (for gloss printing) PiezoFlush (if NOT printing gloss)	Gloss Overprint (for gloss or DN printing)	Gloss Chroma Overprint (for gloss or DN printing)
Light Magenta	Shade #5	Shade #5	Warm: Medium
Light Cyan	Shade #3	Shade #3	Cool: Medium
Light Black	Shade #6	Shade #6	Cool: Light
Black	Shade #1 (Matte or Photo Black)	Shade #1 (Matte Black)	HD Matte or HD Photo Black
Cyan	Shade #2	Shade #2	Cool: Dark
Magenta	Shade #4	Shade #4	Warm: Dark
Yellow	Shade #7	Shade #1 (Photo Black)	Warm: Light
<b>NOTES</b>	* Change black ink for matte or gloss printing. Can print digital negatives. Use "K7" curves	** NO need to change black ink, can also print digital negatives. Use "P2" curves	*** Warm and cool split-tone, change black ink for matte or gloss printing, can also print digital negatives. Use "PRO" curves

**Troubleshooting & Helpful Information**

- \* **Use the printer on a regular basis for best function.** To keep the ink moving thru the cartridges and head moist, print a small image or do a cleaning cycle at least once a week if the printer is not used regularly. It is NOT good to leave pigment ink installed in a printer that will not be used for an extended time- its best to install flush carts and flush ink for safe storage if your printer will sit unused for a month or more (see below for additional information on flushing and storing your printer).
- \* **Long term storage of printer:** We do not recommend letting a printer sit unused with pigment inks installed. If you do not plan to use a printer for an extended period of time, it is best to remove ink cartridges, install a set of flush cartridges and flush ink from the print head by doing 3-4 cleaning cycles, before turning it off for safe storage. Store unused cartridges upright in a sealed plastic bag to avoid drying.
- \* When carts are not being used (in or out of the printer), we recommend sealing air vent holes with plugs or electrical tape to keep carts moist and prevent drying. Make sure air vent holes are OPEN before printing for proper ink flow.
- \* For the best results, monitor and maintain humidity levels between 40-60% in the printing area (this is based on Epson's recommendation). Both low and high humidity can cause problems with the printer, ink and paper.

**Question:** My printer does not recognize the cartridges.

**Answer:** Please compare numbers on the refill cartridges and the Epson OEM carts to make sure they match. If any of your refill cartridge numbers don't match OEM numbers, please send pictures to show us the whole set of cartridges with chip numbers. If the cartridge numbers DO match OEM, please remove the whole set of carts and disconnect the printer power and USB/Cables. Leave the printer off for at least 30 minutes then plug the printer's power cord back in, turn the printer on and re-insert the whole set of refillable carts. You can reconnect the printer USB/Cable after your printer recognizes the refillable carts.

**Question:** I have filled the cartridges with ink but no ink comes out when I try to print.

**Answer:** Make sure air vent tabs are fully removed and air vent holes open, then gently tap cartridges a few times exit valve down on a folded paper towel to release any air that may be restricting ink flow. Reinstall cartridges snugly into the printer's cartridge carriage, then do 1-2 cleaning cycles and print a nozzle check. If there are still missing nozzles, wait about 15 minutes then do another cleaning cycle and print a nozzle check.

**Question:** When I print there are lines on the paper.

**Answer:** Lines on the paper are often caused by missing or mis-firing nozzles (called "banding"), but mis-alignment can also cause lines in the print. Print a nozzle check to make sure all positions are fully and correctly printing. If there are missing or mis-firing nozzles, make sure the air vent tab is fully removed and air vent hole open, then gently tap cartridges a few times, exit valve down on a folded paper towel to force the ink down and release any air that may be restricting ink flow. Reinstall the cartridges snugly into the printer's cartridge carriage for a tight seal then do 1-2 cleaning cycles before printing another nozzle check. If all nozzles are printing and in the correct positions (not mis-firing), then align the printer to the paper thickness you are printing on.

**\*\* If you continue having problems or have additional questions, please refer to our InkjetMall Support Forum, which contains lots of helpful information in the Articles> Product Manuals and Instructions section, as well as previously asked/answered threads to read. You can post a new question to contact us for support if you're unable to find the answer you need.**